

# Bare Fiber Adapter Assembly Components

Feeder Tube-inserted into Fiber Adapter to guide fiber during insertion (FT-250 or FT-900)

Squeeze while inserting fibers. Release to secure.

Ferrule capillary's inner diameter chosen to match fiber diameter

Ferrule Tip:  
FER-xxxxA (angled tip)  
FER-xxxx (flat tip)

Fiber Adapter:  
FA-xxxxA (angled ferrule)  
FA-xxxx (flat ferrule)

Brass Adapter Stem with set screw to secure ferrule tip (FAST-01)

BFAC1 or BFAC2 Coupler Module. This can be used with various interchangeable Fiber Adapters. BFAC2 has integrated fiber advance/retract mechanism

Locking knob to secure adapters

